


Instructions for #145VR VacuVision RF 915

The following instructions describe the procedure for programming the Wireless Receiver (part #145VR), the Hose Board Assembly (part # 145VBA), and the Automitter (part #145VA) to synchronize communication.

1. Install VacuVision RF915 components as per the installation instructions.

2. Programming hose handle

- a. Place three-way switch of hose in center (off) position.
- b. Insert hose end into vacuum inlet valve.
- c. Connect hose to high voltage via direct connect contacts in inlet valve or inserting cord end into electrical outlet.
- d. Press the small black button on the top edge of the Wireless Receiver (part #145VR). Green light on front of receiver should light.

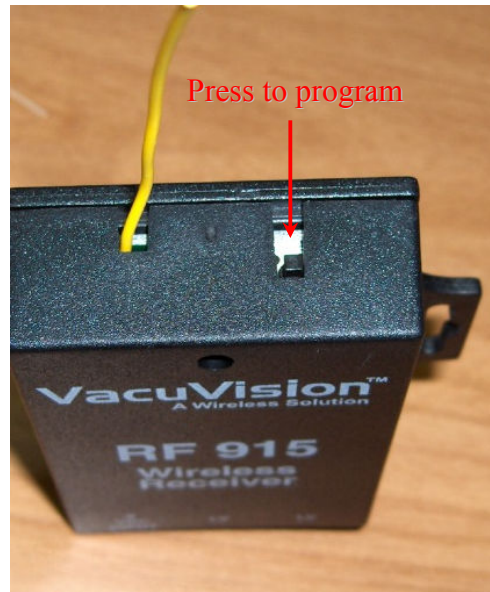

- e. Move three-way switch on the hose handle to the right position for approximately one second. The green light on the receiver should turn off.
- f. Move three-way switch to the center (off) position.
- g. Move three-way switch to the right position. Vacuum power unit should activate.